EN

KODAK USB Power Pack KP1000

User Guide

The KP1000 is a rechargeable Li-Ion power pack ideal for charging and powering MP3 players, cell phones, digital cameras, and portable gaming systems via a USB cable.

Approximate additional run/talk time (results vary by device):

- MP3 players ≤ 33 hours
- Cell phones ≤ 5 hours
- Smart phones ≤ 2.5 hours

Operation

1. Charge the KP1000 before first use. To charge, connect the included micro USB to USB cable to the KP1000 and a USB port on your computer. Charging takes up to 3 hours.

Note: Maximum cycle life is obtained by shallow discharge and charge conditions; bring to a full charge regularly.

2. Connect the USB cable to both the KP1000 and your USB device.

IMPORTANT: *For APPLE mobile digital devices, use the USB cable that came with your device.*

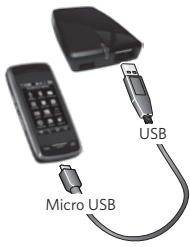

Unplug the cable when not in use to conserve power in the KP1000.

Specifications

Voltage	5.0V DC
Input Current	500 mA
Output Current	700 mA maximum
USB Output	5V
Storage	-4 to 86° F (-20 to 30° C)
Operation	32 to 113° F (0 to 45° C)

IMPORTANT SAFETY INSTRUCTIONS—Save These Instructions

- **DANGER—TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.**
- **CAUTION: Keep dry. Do not operate if it has been subjected to electrical or physical shock or other damage. Do not disassemble product.**
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the product by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the product.
- It is normal for batteries to become warm while charging.

Support

Internet: www.kodak.com/go/support
www.kodak.com/go/contact

Please consult www.kodak.com/go/REACH for information about the presence of substances included on the candidate list according to article 59(1) of Regulation (EC) No. 1907/2006 (REACH).

Waste Electrical and Electronic Equipment/Battery Disposal

In Europe: For human/environmental protection, it is your responsibility to dispose of this equipment and batteries at a collection facility established for this purpose (separate from municipal waste). For more information, contact your retailer, collection facility or appropriate local authorities, or visit www.kodak.com/go/recycle.
Product weight: 44 g (1.6 oz)

Kodak

Eastman Kodak Company
Rochester, NY 14650 U.S.A.

© Kodak, 2010. MC/MR/TM: Kodak. 4H7393